ARAT Telephone mount

Type: AUDI "A2"

Part No: 1299

ARAT GmbH
Spezialhalterungen
für Autotelefone u.-Navigationssysteme

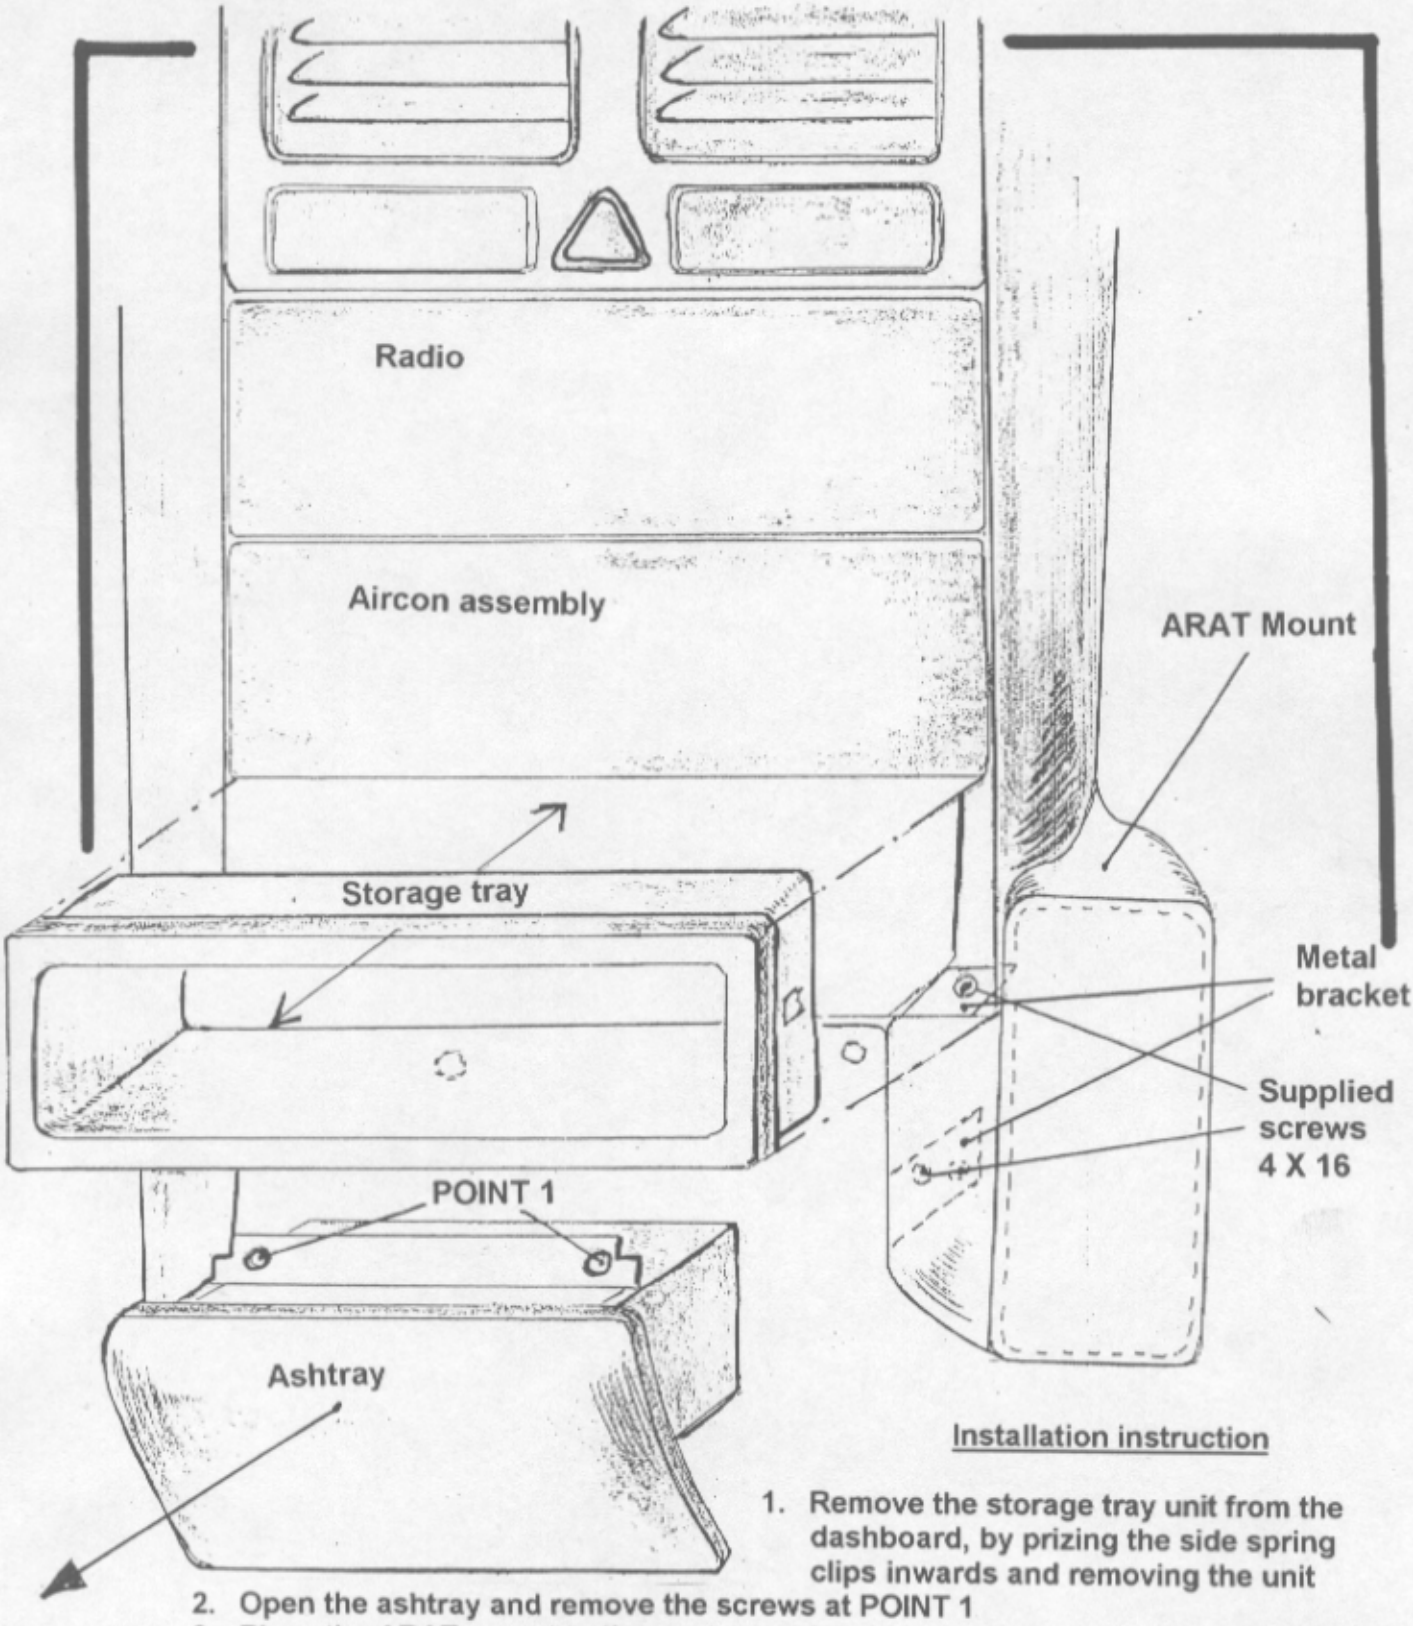

Installation instruction

1. Remove the storage tray unit from the dashboard, by prizing the side spring clips inwards and removing the unit
2. Open the ashtray and remove the screws at POINT 1
3. Place the ARAT mount to the contours of the dashboard, (you may have to slightly bend the metal bracket), with the supplied screws secure the mount through the bracket into the side of the dashboard (pre-drill Ø 2mm)
4. Replace the ashtray and storage tray